

|                                    |                 |  |   |
|------------------------------------|-----------------|--|---|
| Cleaning Cassettes (Fiber Cleaner) | TXM-CLN2-001    | <ul style="list-style-type: none"> <li>● Connector cleaned: SC, SC2, FC, ST, DIN, D4 MU, LC, MT</li> <li>● More than 500 times/cartridge</li> <li>● Size: 125mm (Width) X 70mm (Height) X 29mm (Thickness)</li> </ul>                          | <ol style="list-style-type: none"> <li>1. Press down and hold the thumb lever. The shutter slides back and exposes a new cleaning area.</li> <li>2. Hold the fiber tip lightly against the cleaning area.</li> <li>3. Pull the fiber tip lightly down the exposed cleaning area in the direction of the arrow or from top to bottom.</li> </ol> |
| Replacement Reel                   | TXM-CLN2-001-01 | <ul style="list-style-type: none"> <li>● Environment Operation Temperature -20°C to 50°C</li> <li>● Humidity 20% to 80%R.H.</li> <li>● Preservation Temperature -20°C to 60°C</li> <li>● Size: 17mm*10m</li> <li>● Replacement reel</li> </ul> | <p>Cleaning reel can be replaced in Cleaning Cassettes. Procedure in replacement:</p> <ol style="list-style-type: none"> <li>1. Unscrew the screws from cleaning cassettes and open cassettes.</li> <li>2. Take out the used reel.</li> <li>3. Install new reel in cassettes and return to former condition.</li> </ol>                         |

